



WBM6T Installation Sheet

- 1. Screw speaker to wall
- 2. Insert protective foam
- 3. Run speaker wire through holes on bottom and connect common from amplifier to common on transformer and positive from amplifier to desired wattage on transformer. Replace cover and secure.

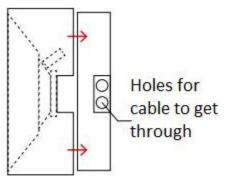

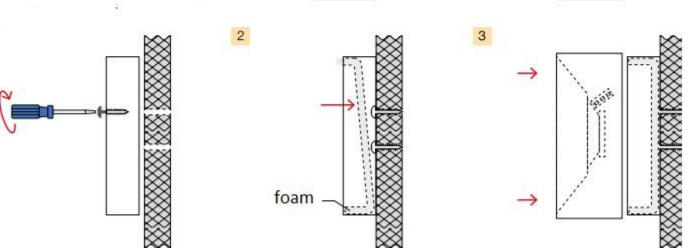

Speco Technologies . 200 New Highway . Amityville . NY . 11701 . www.specotech.com