




WARNING:

- Wear safety glasses before handling optical fiber to protect the eyes.
- Never look into the end of a connector or an optical fiber which, may have a laser coupled to it.

Notes on usage

- Do not attempt to disassemble as this can damage the One Click Fiber Optic Cleaners.
- Do not re-use cleaning cloth as this will eliminate its cleaning ability.
- Do not touch the cleaning cloth as this will cause contamination.
- Do not use the cleaner when empty, as this may damage to the connector.
- Do not expose device to direct sunlight, high temperature or high humidity.
- The cover on the guide cap should be closed at all times when cleaner is not in use .


NO	Description	Function
1	Nozzle	Lead tip to the optical connector end face.
2	Guide Cap	Acts as dust cap or cleaning adapter for connector plug.
3	Indicator	Provides indication of remaining cleaning cloth
4	Lock Button	Push the button to extend and contract the nozzle.

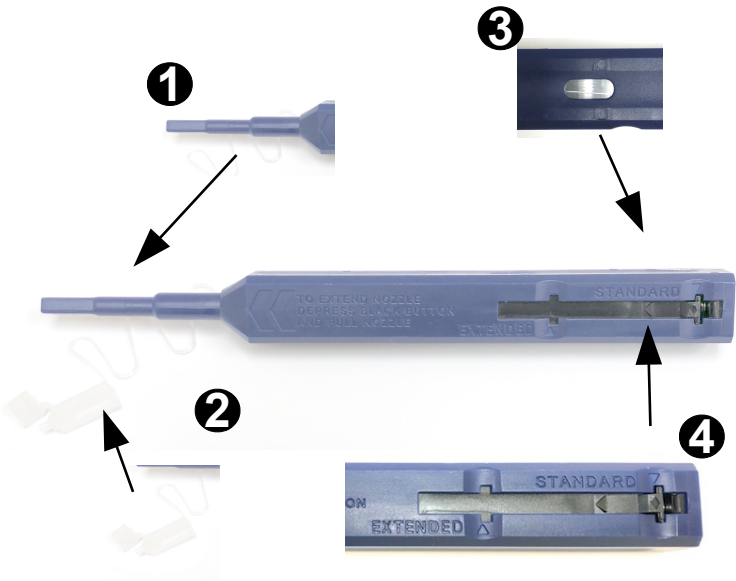


Cleaning Instructions:

To Clean Optical Fiber Adapters:


- 1 Remove guide cap from the nozzle of the fiber cleaner.

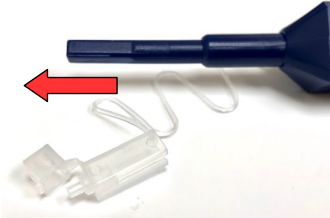

- 2 Insert nozzle of cleaner into the optical fiber adapter.

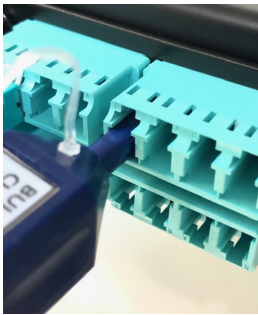


- 3 Push to start cleaning the connector end face. A "click" sound indicates end of cleaning process.

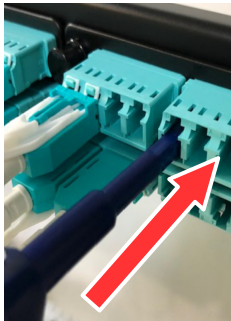


To Clean Optical Fiber Connectors:


- 1 Slide the guide cap on and open the dust cap.

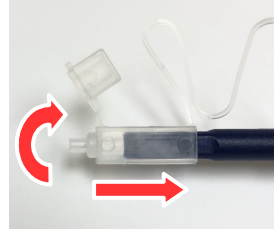

- 2 Insert the connector into the guide cap.

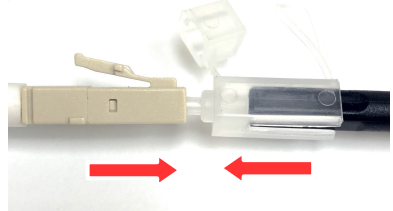

- 3 Push together to start cleaning the optical fiber connector end face. A "click" sound indicates end of cleaning process. Close the cover after use.

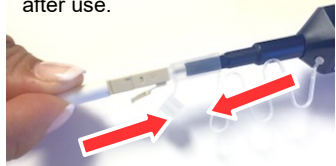

Be careful not to slant the One Click Cleaner while inserting into the adapter. Do not exert excessive force during insertion as this may cause damage to both the connector and the One Click Cleaner.

If cleaning action is inhibited, remove One Click Cleaner from adapter and ensure that there is no obstruction preventing the cleaning process.